


Rosemount™ 2240S Multi-input Temperature Transmitter

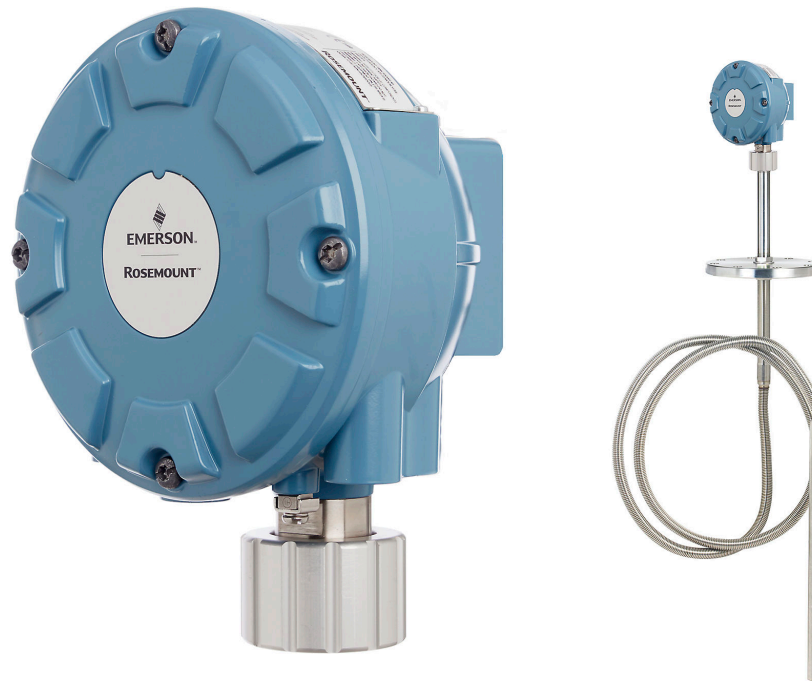

Provides multiple spot temperature measurement in liquid storage tanks, used for average temperature calculation and stratification correction


- Obtain outstanding temperature conversion accuracy of $\pm 0.05\text{ }^{\circ}\text{C}$ ($\pm 0.09\text{ }^{\circ}\text{F}$)
- Get ultra-stable temperature measurement for precise inventory calculations and custody transfer for API chapter 7.3 compliance
- Connect up to sixteen 3- or 4-wire temperature elements
- Include integrated water level sensor
- Benefit from convenient and safe installation with 2-wire IS bus power supply

Exact net volume calculations with highest precision average temperature measurement

The Rosemount 2240S Multi-input Temperature Transmitter provides multiple spot temperature measurement in liquid storage tanks. It is used for calculation of the average temperature of the liquid and corrects for stratification.

The temperature transmitter supplies measured data, such as temperature and water level, via the intrinsically safe 2-wire Tankbus, to a Rosemount 2410 Tank Hub. Measurement data and status information can be viewed on a PC with the Rosemount TankMaster software, as well as on the integral display of the tank hub and the Rosemount 2230 Graphical Field Display.

Figure 1: Tank Gauging System Overview

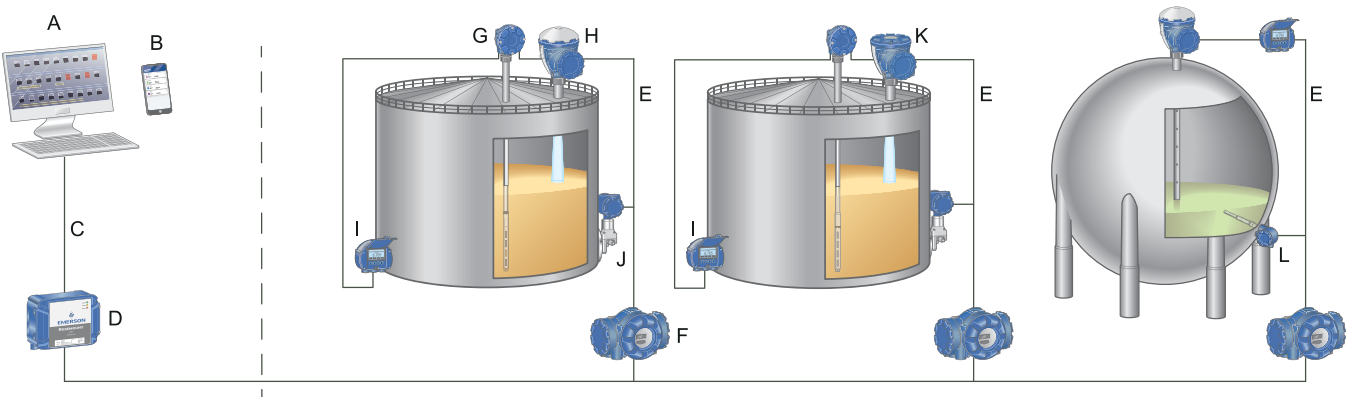

- A. Rosemount TankMaster Inventory Management
- B. Rosemount TankMaster Mobile Inventory Management
- C. Modbus® RTU/TCP
- D. Rosemount 2460 System Hub
- E. Tankbus
- F. Rosemount 2410 Tank Hub
- G. Rosemount 2240S Multi-input Temperature Transmitter with Rosemount 765 Multiple Spot Temperature and Water Level Sensor
- H. Rosemount 5900S Radar Level Gauge
- I. Rosemount 2230 Graphical Field Display
- J. Rosemount 3051S Pressure Transmitter
- K. Rosemount 5900C Radar Level Gauge
- L. Rosemount 3144P Temperature Transmitter with Rosemount 114C or 214C Single Point Temperature Sensor

Contents

Exact net volume calculations with highest precision average temperature measurement.....	2
Ordering information.....	4
Specifications.....	8
Product certifications.....	13
Dimensional drawings.....	14

Highly accurate multiple spot temperature and water level sensors

The Rosemount 2240S is approved for demanding custody transfer applications, which require very accurate level and temperature measurements for net standard volume calculations. It has an ultra high temperature conversion accuracy of $\pm 0.05^{\circ}\text{C}$ ($\pm 0.09^{\circ}\text{F}$). The IP 66/67 and NEMA® 4X certified robust design makes it suitable for installation in harsh environments.

Rosemount 2240S can connect up to sixteen 3- or 4-wire temperature spot elements and an integrated water level sensor. The value from each individual spot temperature element, in combination with the level value from the radar gauge is used for average liquid temperature calculation.

The water level sensor is factory calibrated. If any adjustment is necessary during installation, it can easily be done with the Rosemount 2240S built-in on-line calibration feature.

Available temperature sensor versions are:


- Rosemount 565 Multiple Spot Temperature Sensor
- Rosemount 566 Multiple Spot Temperature Sensor for cryogenic applications such as LNG
- Rosemount 765 Multiple Spot Temperature Sensor with Integrated Water Level Sensor
- Rosemount 614 Cryogenic Spot Temperature Sensor

Precise and reliable measurements in cryogenic storage tanks

The Rosemount 2240S Multi-input Temperature Transmitter provides complete temperature measurements for cryogenic and refrigerated full containment storage.

[Figure 2](#) illustrates an LNG Tank Gauging system with temperature transmitters for average liquid temperature measurement and online redundant temperature stratification monitoring. The system also includes temperature transmitters for skin/cool-down temperature measurement (white dotted line) and leak detection (red dotted line).

Figure 2: Full Containment Tank Gauging System for LNG and other Liquefied Gases

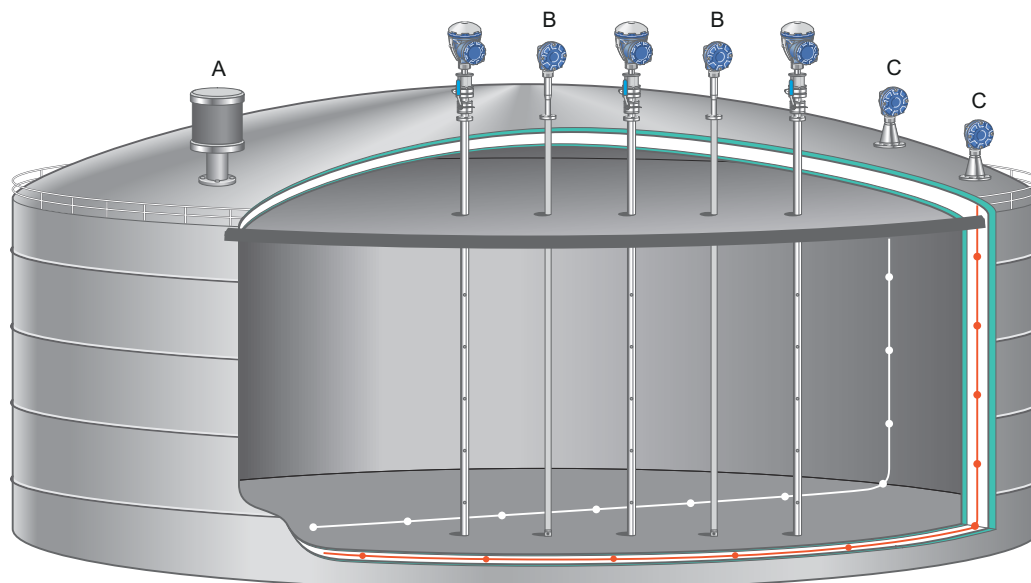

A. Optional separate device for temperature and density profiling (LTD)

B. Rosemount 2240S Multi-input Temperature Transmitter with Rosemount 566 Multiple Spot Temperature Sensor

C. Rosemount 2240S Multi-input Temperature Transmitter with Rosemount 614 Cryogenic Spot Temperature Sensor

Ordering information

Specifications and options

Specification and selection of product materials, options, and/or components must be made by the purchaser of the equipment.

Related information

[Specifications](#)

Model codes

Model codes contain the details related to each product. Exact model codes will vary; an example of a typical model code is shown in [Figure 3](#).

Figure 3: Model Code Example

2240S P 16 4 A F I 1 0 A 1 M	WR3 ST
1	2

- 1. Required model components (choices available on most)
- 2. Additional options (variety of features and functions that may be added to products)

Ordering information



The ultra-stable Rosemount 2240S is approved for demanding custody transfer applications, which require very accurate temperature measurements for net standard volume calculations.

It can be used with a Rosemount 565, 566, or 765 temperature sensor. The Rosemount 2240S connects up to sixteen 3- or 4-wire temperature spot elements and an integrated water level sensor.

Rosemount 2240S provides average liquid temperature for net volume calculation based on each individual spot temperature element in combination with the corresponding level value. It has an impressive temperature conversion accuracy of $\pm 0.05\text{ }^{\circ}\text{C}$ ($\pm 0.09\text{ }^{\circ}\text{F}$).

[VIEW PRODUCT >](#)

Required model components

Model

Code	Description
2240S	Multi-input Temperature Transmitter

Performance class

Code	Description
P	Premium

Number of temperature sensor inputs

Code	Description
16 ⁽¹⁾	Up to 16xRTD spot elements
08 ⁽¹⁾	Up to 8xRTD spot elements
04 ⁽¹⁾	Up to 4xRTD spot elements
00 ⁽²⁾	None

(1) Temperature sensors of Pt-100 or Cu-90 type, for use in -200 to $250\text{ }^{\circ}\text{C}$ (-328 to $482\text{ }^{\circ}\text{F}$), can be connected to the Rosemount 2240S.

(2) Water level sensor only requires Number of temperature sensor inputs code 00, Temperature elements wiring code 0, and Auxiliary inputs code A.

Temperature elements wiring

Code	Description
4	4-wire or 3-wire (individual or common return)
0 ⁽¹⁾	None (for water level only, no temperature sensors)

(1) Water level sensor only requires Number of temperature sensor inputs code 00, Temperature elements wiring code 0, and Auxiliary inputs code A.

Auxiliary inputs

Code	Description
A ⁽¹⁾	Rosemount 765 temperature and water level sensor input
0	None

(1) Water level sensor only requires Number of temperature sensor inputs code 00, Temperature elements wiring code 0, and Auxiliary inputs code A.

Tankbus: Power and communication

Code	Description
F	Bus powered 2-wire FOUNDATION™ Fieldbus (IEC 61158)

Hazardous location certification

Code	Description
I1	ATEX Intrinsic Safety
I2	Brazil Inmetro Intrinsic Safety
I3	China Intrinsic Safety
I4	Japan Intrinsic Safety
I5	FM-US Intrinsic Safety
I6	FM-Canada Intrinsic Safety
I7	IECEx Intrinsic Safety
IM	Technical Regulations Customs Union (EAC) Intrinsic Safety
IP	KC Intrinsic Safety (South Korea)
NA	No Hazardous Location Certification

Custody transfer type approval

Code	Description
C ⁽¹⁾⁽²⁾⁽³⁾⁽⁴⁾	PTB (German W&M approval)
J ⁽¹⁾⁽²⁾⁽³⁾⁽⁴⁾	NMIM (Malaysia)
K ⁽²⁾⁽³⁾	GOST (Kazakhstan)
0	None

- (1) Approval plate, sealing kit and Eich adapter included. One spot position used for external reference. Available spot elements in Number of temperature sensor inputs = 15, 7, or 3.
- (2) Requires Rosemount 2410 Tank Hub and Rosemount 5900S Radar Level Gauge with corresponding Custody transfer type approval.
- (3) Requires one out of following displays: Rosemount 2410 with integral display, Rosemount 2230 with corresponding Custody transfer type approval, or TankMaster.
- (4) Requires temperature sensors with Certificate option code Q4 and Sensor calibration option code X8.

Housing

Code	Description
A	Standard enclosure (polyurethane-covered aluminum IP 66/67)

Cable/Conduit connections

Code	Description
1	½-14 NPT, female thread (includes 2 plugs)
2	M20 x 1.5 adapters, female thread (includes 2 plugs, and 3 adapters)
G ⁽¹⁾	Metal cable glands (½-14 NPT)
E	Eurofast® male connector and ½-14 NPT (includes 2 plugs)
M	Minifast® male connector and ½-14 NPT (includes 2 plugs)

(1) Minimum temperature -20 °C (-4 °F). ATEX / IECEx. Exe approved. Includes 2 plugs, and 3 glands (includes an M32 gland if combined with Mechanical installation code W or P).

Mechanical installation

Code	Description
M ⁽¹⁾	Prepared for integrated installation with Rosemount 565, 566, or 765 (standard) temperature sensor
W ⁽²⁾	Installation kit for wall mounting
P ⁽²⁾	Installation kit for wall and pipe mounting (1-2 in. vertical and horizontal pipes)

(1) M33x1.5 female threaded connection. As standard, the transmitter is not pre-assembled with any temperature sensor.

(2) For separate installation of temperature sensor and transmitter.

Additional options

Tag plate

Code	Description
ST	Engraved SST tag plate (tag shall be submitted with order)

Conformance certificate

Code	Description
Q1	Certificate of conformance

Calibration certificate

Code	Description
Q4	Calibration certificate

Hazardous location certificate

Code	Description
Q7	Printed copy of hazardous location certificate

Extended product warranty

Rosemount extended warranties have a limited warranty of three or five years from date of shipment.

Code	Description
WR3	3-year limited warranty
WR5	5-year limited warranty

Specifications

Performance specifications

Temperature conversion accuracy

± 0.05 °C (± 0.09 °F)

Over measuring range and ambient temperature 20 °C (68 °F)

Ambient temperature effect

± 0.05 °C (± 0.09 °F) within the total range; -40 to 70 °C (-40 to 158 °F)

Temperature measuring range

Supports -200 to 250 °C (-328 to 482 °F) for Pt-100

Resolution

± 0.1 °C (± 0.1 °F) according to API chapter 7 and 12

Update time

4 seconds

General specifications

Material selection

Emerson provides a variety of Rosemount products with various product options and configurations, including materials of construction that can be expected to perform well in a wide range of applications.

The product information presented is intended as a guide for the purchaser to make an appropriate selection for the application. It is the purchaser's sole responsibility to make a careful analysis of all process parameters (such as all chemical components, temperature, pressure, flow rate, abrasives, contaminants, etc.), when specifying product, materials, options, and components for the particular application. Emerson is not in a position to evaluate or guarantee the compatibility of the process fluid or other process parameters with the product, options, configuration, or materials of construction selected.

Number of spot elements and wiring

Up to 16 RTD spot elements or averaging sensors can be connected to a Rosemount 2240S.

Rosemount temperature / water level sensors (models 565, 566, and 765)

Three wiring types can be used:

- 3-wire RTD with common return (1-16 spot elements)
- 3-wire RTD individual:
 - 1-16 spot elements with Rosemount 565 and 566
 - 1-14 spot elements with Rosemount 765

- 4-wire RTD individual:
 - 1-16 spot elements with Rosemount 565 and 566
 - 1-10 spot elements with Rosemount 765

Rosemount 614 Cryogenic Spot Temperature Sensor

The following wiring types can be used:

- 3-wire RTD individual (1-16 spot elements)
- 4-wire RTD individual (1-16 spot elements)

Standard temperature sensor types

Supports Pt-100 (according to IEC/EN60751, ASTM E1137) and Cu-90

Metrology sealing possibility

Yes

Write protect switch

Yes

Configuration specifications

Configuration tool

TankMaster WinSetup is the recommended tool for easy configuration of Rosemount 2240S. The Tankbus autoconfiguration feature, handled by the Rosemount 2410 Tank Hub, supports Rosemount 2240S.

Configuration parameters (examples)

Temperature

- Number of temperature sensor elements
- Temperature element type (spot or average)
- Temperature element position in tank

Water level sensor

- Level offset (difference between tank zero level and water zero level)
- Probe length (autoconfigured by Rosemount 765)

Output variables and units

Spot and average temperature: °C (Celsius), and °F (Fahrenheit)

Free water level (FWL): meter, centimeter, millimeter, feet, or inch

FOUNDATION™ Fieldbus characteristics

Polarity sensitive

No

Quiescent current draw

30 mA

Lift-off minimum voltage

9.0 VDC

Device capacitance inductance

See [Product certifications](#)

FOUNDATION Fieldbus class (basic or Link Master)

Link Master (LAS)

Number of available VCRs

Maximum 20, including one fixed

Links

Maximum 40

Minimum slot time / maximum response delay / minimum intermessage delay

8/5/8

Blocks and execution time

Block	Execution time
1 Resource	N/A
3 Transducer (Temperature, Register, AVG_Temp)	N/A
2 Multiple Analog Input (MAI)	15 ms
6 Analog Input (AI)	10 ms
1 Analog Output (AO)	10 ms
1 Signal Characterizer (SGCR)	10 ms
1 Proportional/Integral/Derivate (PID)	15 ms
1 Integrator (INT)	10 ms
1 Arithmetic (ARTH)	10 ms
2 Input Selector (ISEL)	10 ms
1 Control Selector (CS)	10 ms
1 Output Splitter (OS)	10 ms

For more information, see the FOUNDATION™ Fieldbus Blocks [Manual](#).

Instantiation

Yes

Conforming FOUNDATION™ Fieldbus

ITK 6

Field Diagnostics support

Yes

Action support wizards

Restart/stop measurement, write protect device, factory reset - measurement configuration, reset statistics, start/stop device simulation

Advanced diagnostics

Failures/Maintenance/Advisory alerts: Software, memory/database, electronics, internal communication, simulation, auxiliary device, auxiliary device measurement, ambient temperature, average temperature measurement, temperature measurement, configuration

Electrical specifications

Power supply

FISCO: 9.0 - 17.5 VDC polarity insensitive (for example from Rosemount 2410 Tank Hub)

Entity: 9.0 - 30.0 VDC polarity insensitive

Internal power consumption

0.5 W

Bus current draw

30 mA

Tankbus cabling

0.5-1.5 mm² (AWG 22-16), twisted shielded pairs

Built-in Tankbus terminator

Yes (to be connected if required)

Tankbus to sensor isolation

Minimum 700 VAC

Auxiliary sensor input

Digital bus connection for water level sensor

Mechanical specifications

Housing material

Polyurethane-coated die-cast aluminum

Cable entry (connection/glands)

Three ½ - 14 NPT entries for cable glands or conduits. Two metal plugs to seal any unused ports are enclosed in the delivery.

Optional:

- M20 x 1.5 conduit / cable adapter
- Cable glands in metal (½ - 14 NPT)
- 4-pin male eurofast connector or A size Mini 4-pin male minifast connector

Rosemount 565/566/765 connection

M33 x 1.5 female threaded connection

Optional:

- An M32 adapter or M32 gland can be used if the Rosemount 2240S is installed away from the sensor

Rosemount 614 connection

Optional cone with M33 x 1.5 female threaded connection

Installation

The Rosemount 2240S can be installed directly on top of the temperature / water level sensor or remotely installed on a 33.4-60.3 mm (1 to 2-in) pipe or on a wall

Weight

2.8 kg (6.2 lbs)

Environmental specifications

Ambient temperature

-40 to 70 °C (-40 to 158 °F)

Minimum start-up temperature -50 °C (-58 °F)

Storage temperature

-50 to 85 °C (-58 to 185 °F)

Humidity

0-100% relative humidity

Ingress protection

IP 66 and 67 (NEMA® 4X)

Transient / built-in lightning protection

According to IEC 61000-4-5, level 1 kV line to ground.


Complies with IEEE 587 Category B transient protection and IEEE 472 surge protection.

Product certifications

See the Rosemount 2240S [Product Certifications](#) document for detailed information on the existing approvals and certifications.

Dimensional drawings

Figure 4: Rosemount 2240S

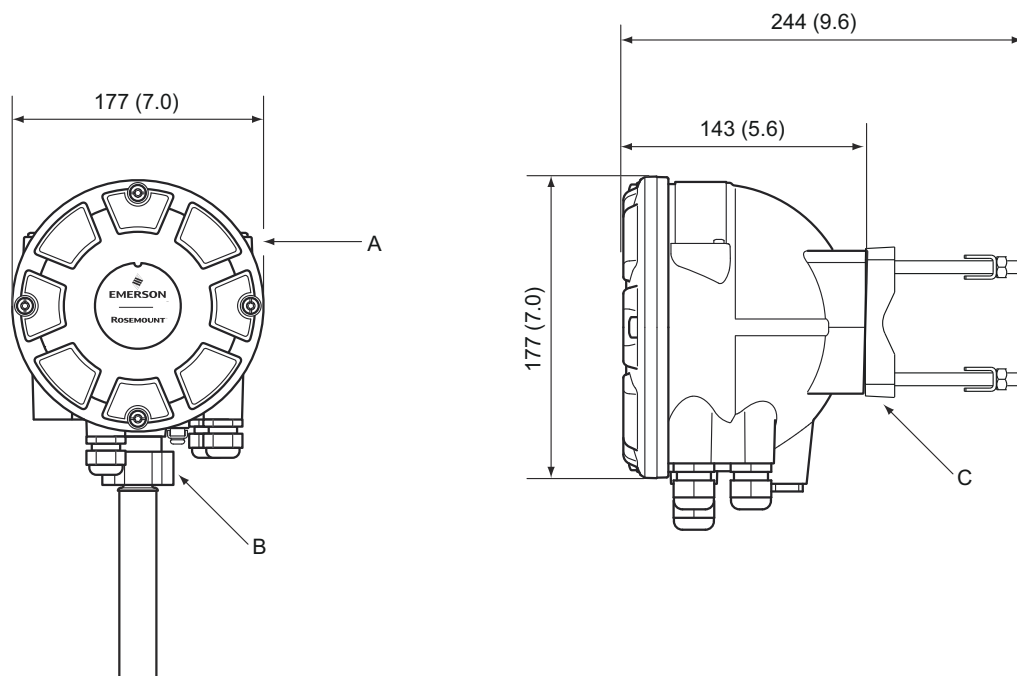

- A. Optional tag plate
- B. M33
- C. Optional mounting kit

Dimensions are in millimeters (inches).

Installation options

- Installed with a multiple spot temperature sensor
- Installed separately on a 33.4-60.3 mm (1 to 2-in.) pipe, or on a wall

For more information: [Emerson.com/global](https://emerson.com/global)

©2026 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

ROSEMOUNT™

